

EMOSAFE EN-100

Product Datasheet

Network Isolators for PCB assembly



1 FEATURES AND ADVANTAGES

- Suitable for PCB assembly: pluggable or solderable
- Ultra-compact
- Conforms to IEC 60601-1
- 10/100/1000 Mbit/s Ethernet
- Outstanding Ethernet performance in accordance with ISO 11801 Class D
- UL Recognized Component
- Conforms to RoHS
- 4.6 kV AC dielectric strength
- 8.5 kV DC dielectric strength
- Transient voltage suppression on all signal lines
- Suitable for devices with supply voltages of up to 400 V AC
- 100% quality control testing

2 GENERAL DESCRIPTION

EMOSAFE EN-100 Network Isolators disconnect every electrically conducting connection (specifically the data and shield conductors) between devices connected together via a copper-based Ethernet network. The Network Isolators prevent current flow resulting from differences in electrical potentials, and also protect connected devices and their users from stray external voltages and power surges which may be directly or inductively coupled onto the network lines by causes such as installation errors, lightning, switching operations, and electrostatic discharge.

EMOSAFE EN-100 Network Isolators are intended for integration into printed circuit boards (PCBs) of electronic devices requiring advanced protection. Models are available with socket strips for plug-in assembly, and there are models that can be permanently soldered in place. Their extremely compact design allows them to be utilised in situations where there is limited physical space. A summary of the available variants can be found in section [4 SUMMARY OF VARIANTS](#).

All EN-100 Network Isolators offer a particularly effective level of device protection. Voltage spikes on individual signal conductors are eliminated by means of a supplementary transient voltage suppression (TVS) diode circuit. These transient voltages cannot be repressed by conventional network isolators. However, even these are eliminated by the EN-100.

The entire EN-100 series meet the requirements of IEC 60601-1 and IEC 60601-1-2, and as such are suitable for providing medical electrical (ME) devices the required galvanic isolation for their Ethernet interfaces.

EMOSAFE Network Isolators transmit high-frequency signals through the principle of electromagnetic induction. Because of this, they do not require their own power supplies. There are no software drivers to be installed.

Low-frequency signal components are strongly attenuated, so that connected devices may, for example, be protected against ground loops.

3 APPLICATIONS

3.1 PATIENT PROTECTION

Electrical separation of Ethernet interfaces of medical electrical (ME) devices and systems, where patients must be protected from dangerous leakage currents, in conformity with applicable standards.

3.2 EQUIPMENT PROTECTION

Applications, in which valuable devices or those requiring special protection need to be protected against ripple, mains hum, and surge voltages from the network periphery.

3.3 MEASUREMENT TECHNOLOGY

Electrical measuring and monitoring equipment, which needs to be protected against external voltages and interference voltages arising from the Ethernet periphery.


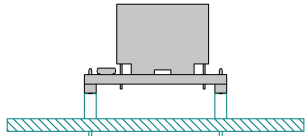

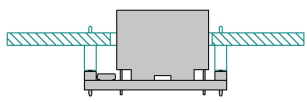

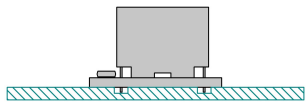

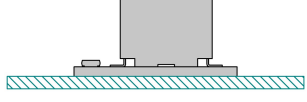
3.4 AUDIO

Audio applications, in which the transmission of low frequency alternating current voltages (mains hum) over the network connection is to be reduced to an imperceptible level.

4 SUMMARY OF VARIANTS

EN-100

Network Isolators
for PCB assembly

	Name Article number	Special features	AC dielectric strength in kV	TVS diodes	10/100/1000 Mbit/s	Typical Return Loss in dB @ 100 MHz	Typical Insertion Loss in dB @ 100 MHz	Configuration
<p>Pluggable</p> 	<p>EN-100T A10049</p>	<p>Extra-short length between inputs and outputs.</p> <p>Downwards-facing pins.</p> <p>In-circuit pluggable and solderable.</p>	4.6	✓	✓	17	0.8	
<p>Pluggable</p> 	<p>EN-100L A10050</p>	<p>Extra-short length between inputs and outputs.</p> <p>Upwards-facing pins.</p> <p>In-circuit pluggable and solderable.</p>	4.6	✓	✓	17	0.8	
<p>Solderable</p> 	<p>EN-100S A10048</p>	<p>Extra-short length between inputs and outputs.</p> <p>Edge soldering receptacles for manual assembly.</p> <p>Solderable.</p>	4.6	✓	✓	17	0.8	
<p>Solderable</p> 	<p>EN-100C A10051</p>	<p>Milling of PCB is not required.</p> <p>Edge soldering receptacles for manual assembly.</p> <p>Solderable.</p>	4.6	✓	✓	17	0.8	

5 DRAWINGS

All dimensions in millimetres.

5.1 EN-100T

5.1.1 EN-100T MODULE DIMENSIONS

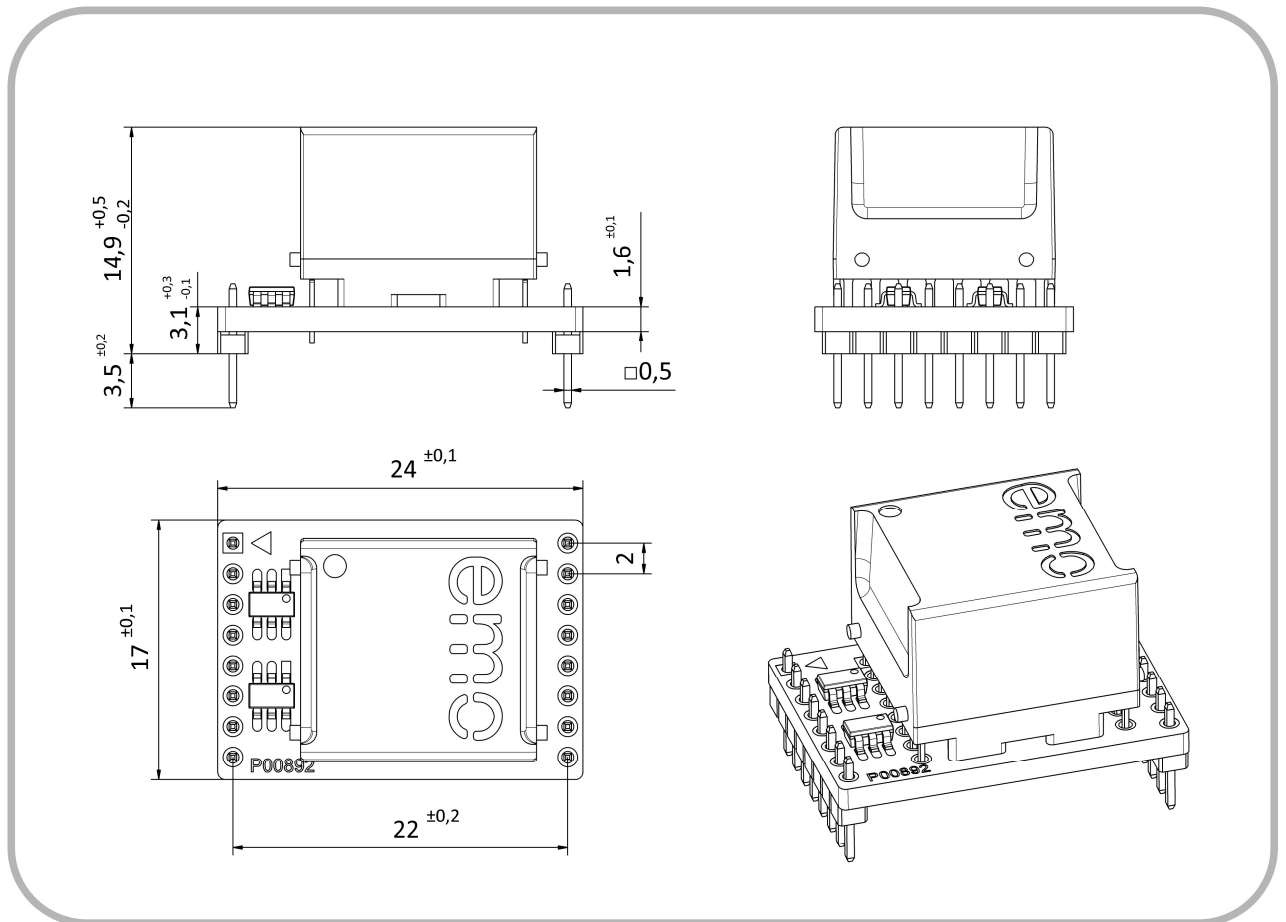


Figure 1. Physical dimensions of the EN-100T module.

5.1.2 EN-100T ASSEMBLY DIMENSIONS

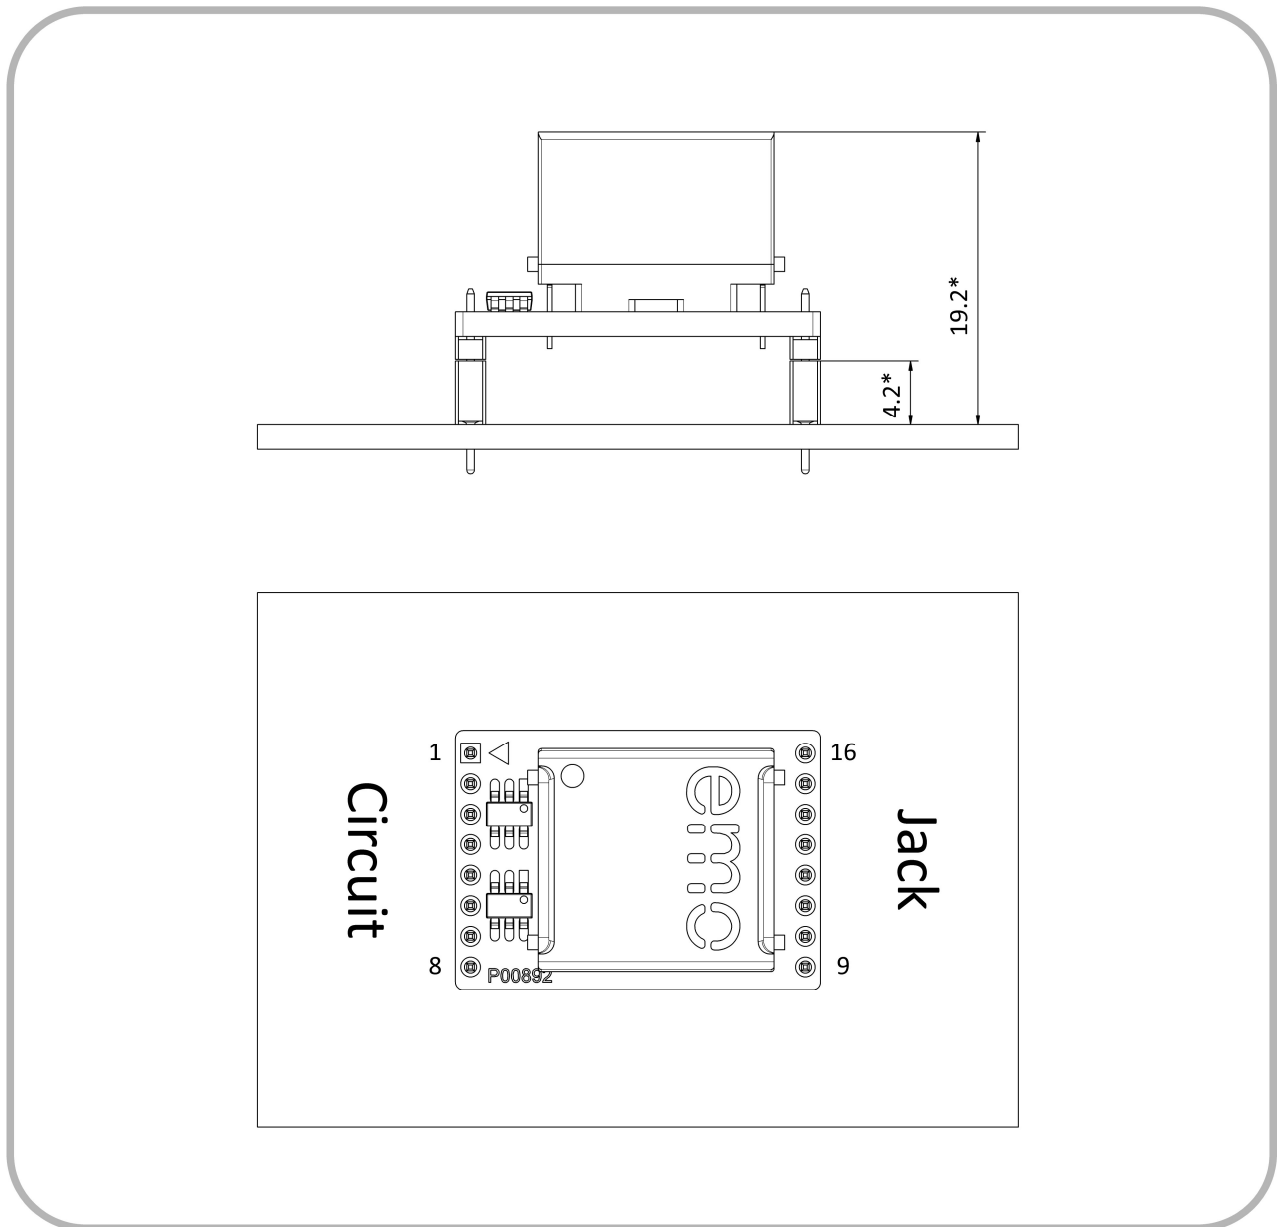


Figure 2. Physical dimensions of an EN-100T assembled onto a PCB. The labels **Jack** and **Circuit** indicate the intended locations of the RJ45 Ethernet Jack and the product circuitry, respectively.

* The pin connectors may be directly soldered onto the PCB, or plugged into a pre-mounted socket strip. Figure 2 illustrates a socket strip with a height of 4.2 mm. The total assembly height is reduced by this amount when a socket strip is not used.

5.1.3 EN-100T PCB LAYOUT

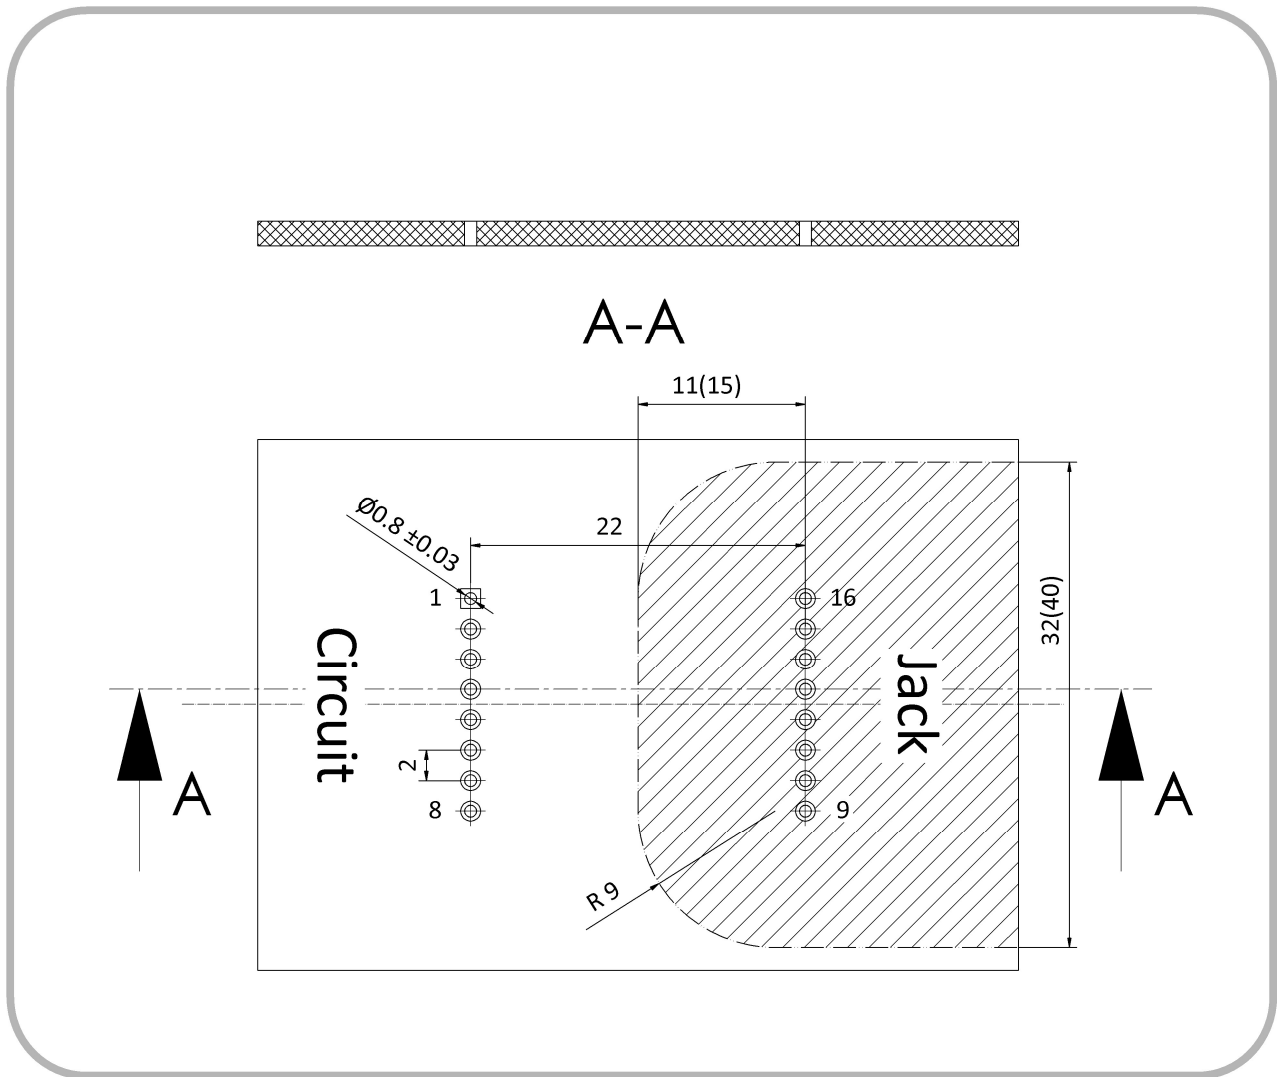


Figure 3. Suggested PCB layout for the EN-100T.
 When fitting PCB socket strips, ensure that they are suitable for the EN-100T, and that they match the PCB holes.
 Dimensions in parentheses indicate the clearances required for environments with voltages up to 400 V AC.

PCB traces and other conducting surfaces must not be present in the hatched area, except for those connecting the EN-100T to the Ethernet Jack. This is required in order to maintain the creepage and clearance distances.

The dimensions of the hatched area are based upon requirements for realising two means of patient protection (MOPP) for medical electrical (ME) devices. For such ME applications, those with operating voltages of up to 250 V AC require the dimensions indicated in Figure 3 to be met or exceeded, and those with operating voltages of up to 400 V AC require the dimensions indicated in parentheses in Figure 3 to be met or exceeded.

However, the actual requirements for the clearance and creepage distances vary with device and application, and must be determined and verified. The assembly of the Network Isolator in a manner that satisfies requirements and relevant standards is the responsibility of the device manufacturer.

5.2 EN-100L

5.2.1 EN-100L MODULE DIMENSIONS

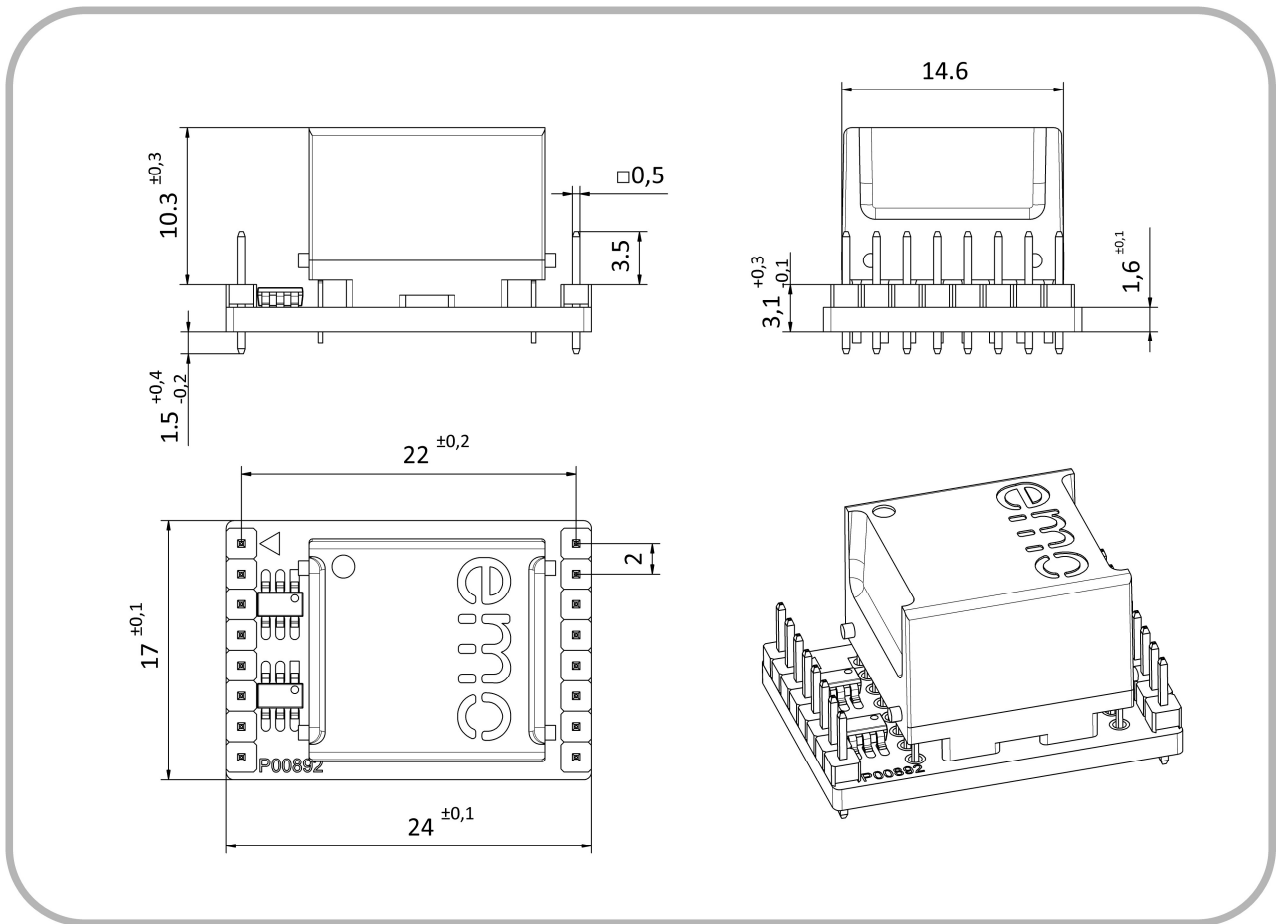


Figure 4. Physical dimensions of the EN-100L module.

5.2.2 EN-100L ASSEMBLY DIMENSIONS

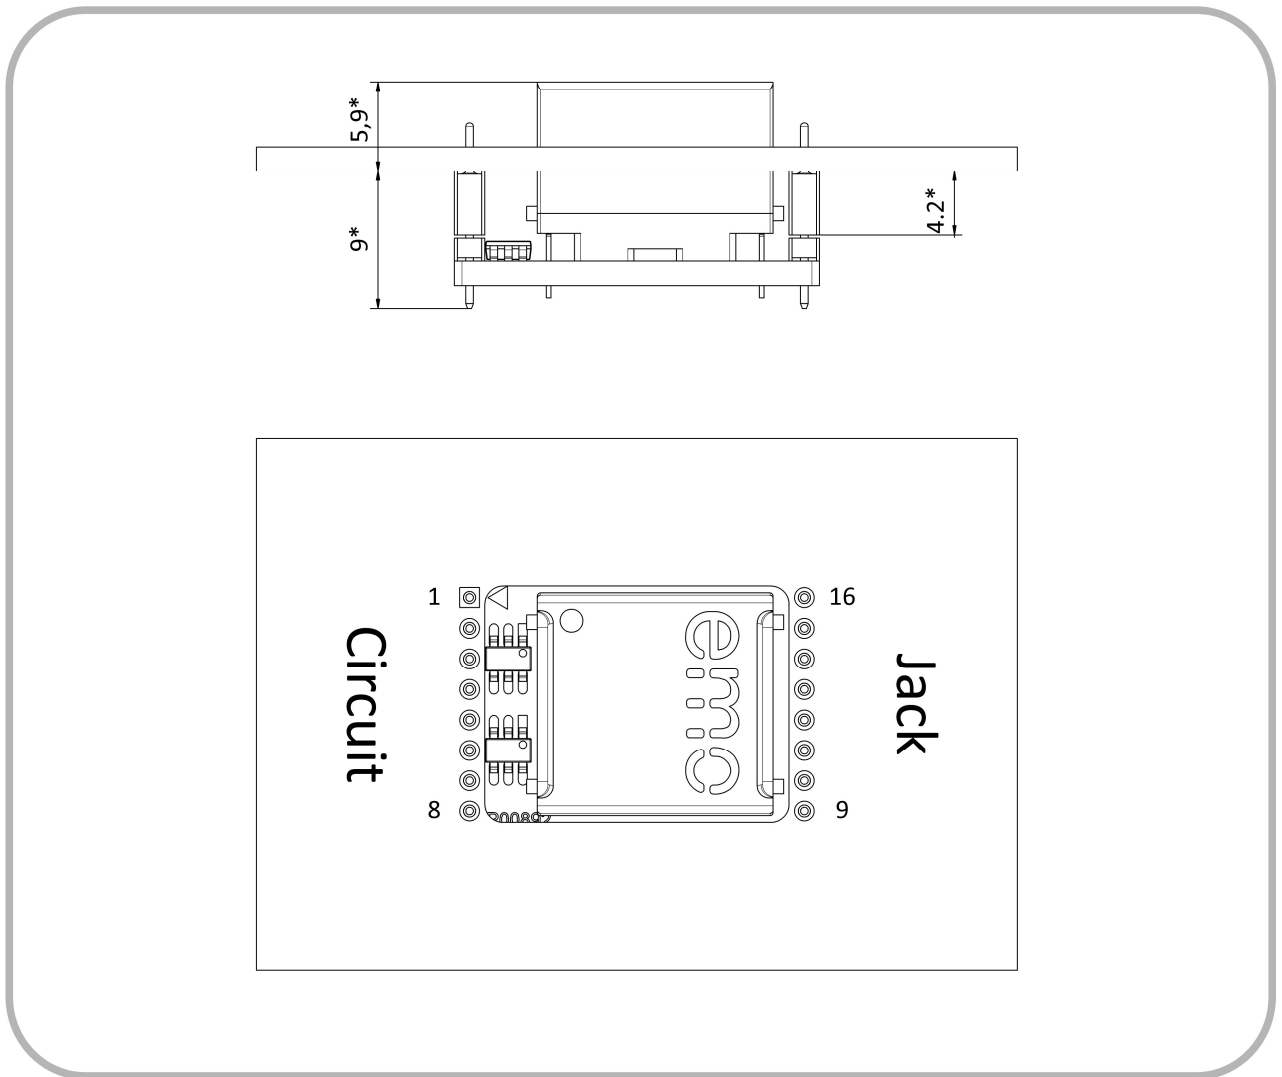


Figure 5. Physical dimensions of an EN-100L assembled onto a PCB. The labels Jack and Circuit indicate the intended locations of the RJ45 Ethernet Jack and the product circuitry, respectively.

* The pin connectors may be directly soldered onto the PCB, or plugged into a pre-mounted socket strip. Figure 5 illustrates a socket strip with a height of 4.2 mm. The final assembly position is changed by this amount when a socket strip is not used.

5.2.3 EN-100L PCB LAYOUT

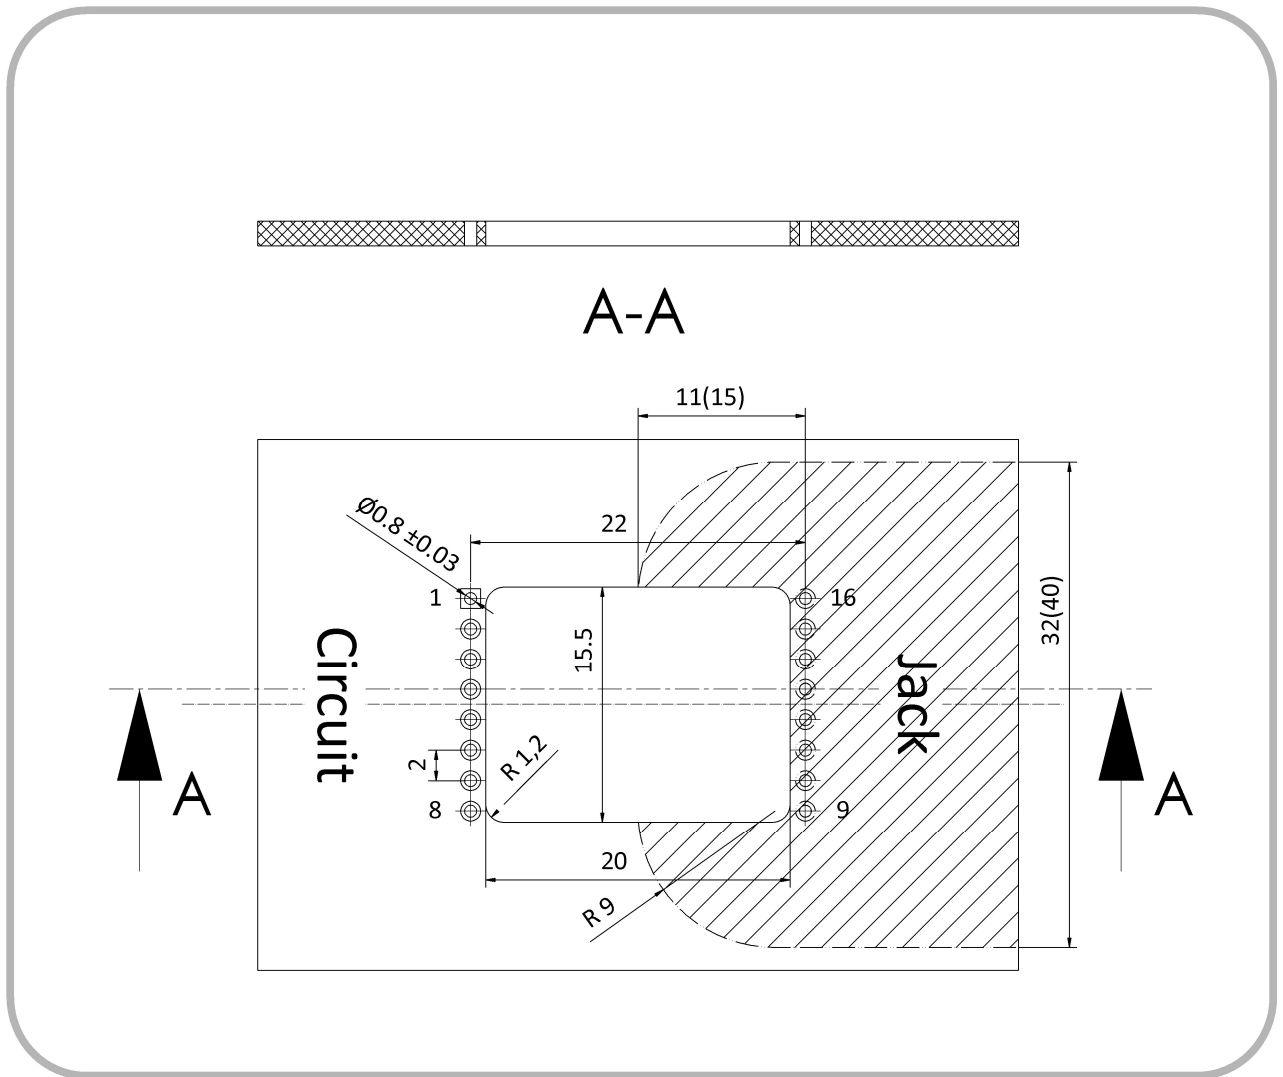


Figure 6. Suggested PCB layout for the EN-100L.
 Pay careful attention to the required PCB cut-out area, as detailed.
 When fitting PCB socket strips, ensure that they are suitable for the EN-100L, and that they match the PCB holes.
 Dimensions in parentheses indicate the clearances required for environments with voltages up to 400 V AC.

PCB traces and other conducting surfaces must not be present in the hatched area, except for those connecting the EN-100L to the Ethernet Jack. This is required in order to maintain the creepage and clearance distances.

The dimensions of the hatched area are based upon requirements for realising two means of patient protection (MOPP) for medical electrical (ME) devices. For such ME applications, those with operating voltages of up to 250 V AC require the dimensions indicated in Figure 6 to be met or exceeded, and those with operating voltages of up to 400 V AC require the dimensions indicated in parentheses in Figure 6 to be met or exceeded.

However, the actual requirements for the clearance and creepage distances vary with device and application, and must be determined and verified. The assembly of the Network Isolator in a manner that satisfies requirements and relevant standards is the responsibility of the device manufacturer.

5.3 EN-100S

5.3.1 EN-100S MODULE DIMENSIONS

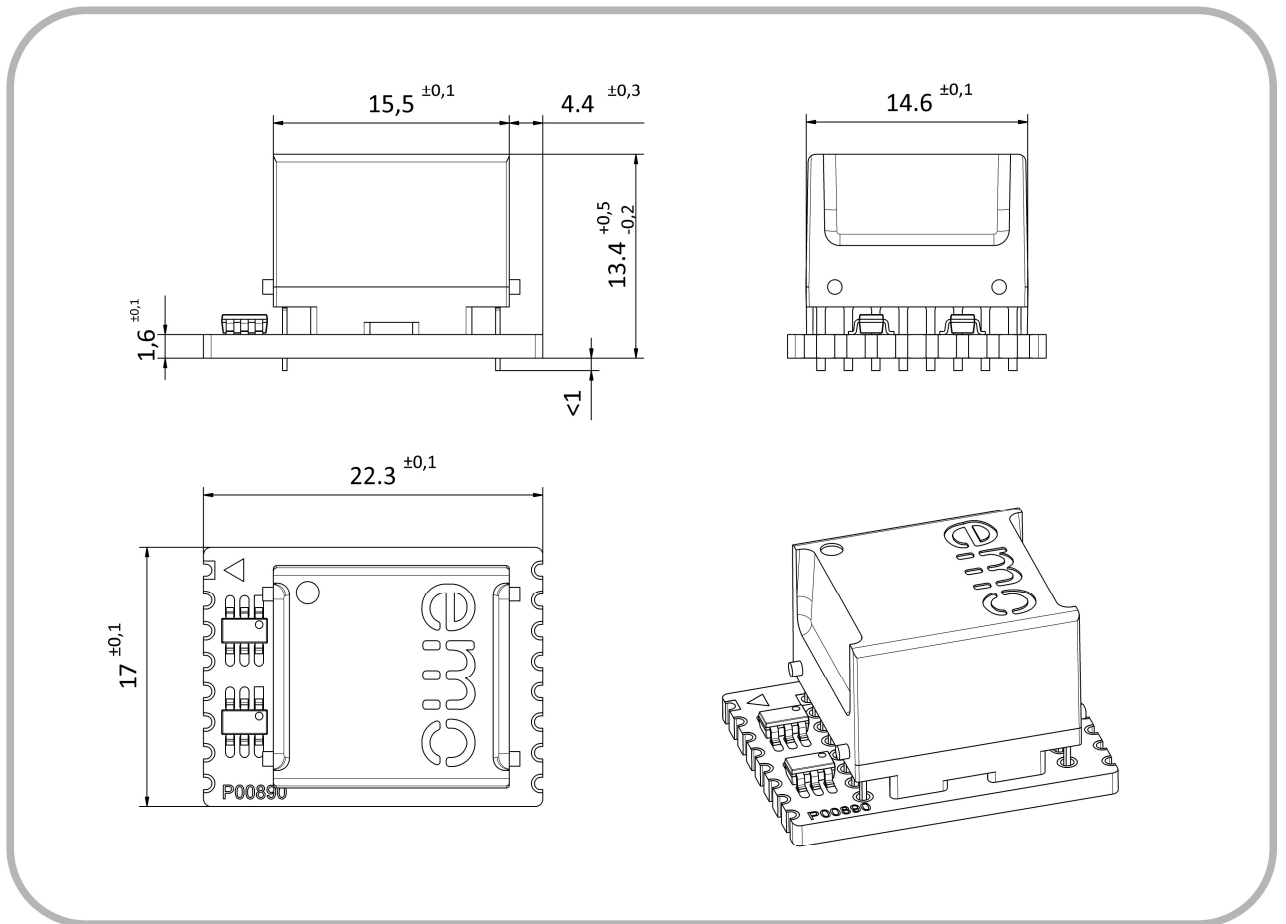


Figure 7. Physical dimensions of the EN-100S module.

5.3.2 EN-100S ASSEMBLY DIMENSIONS

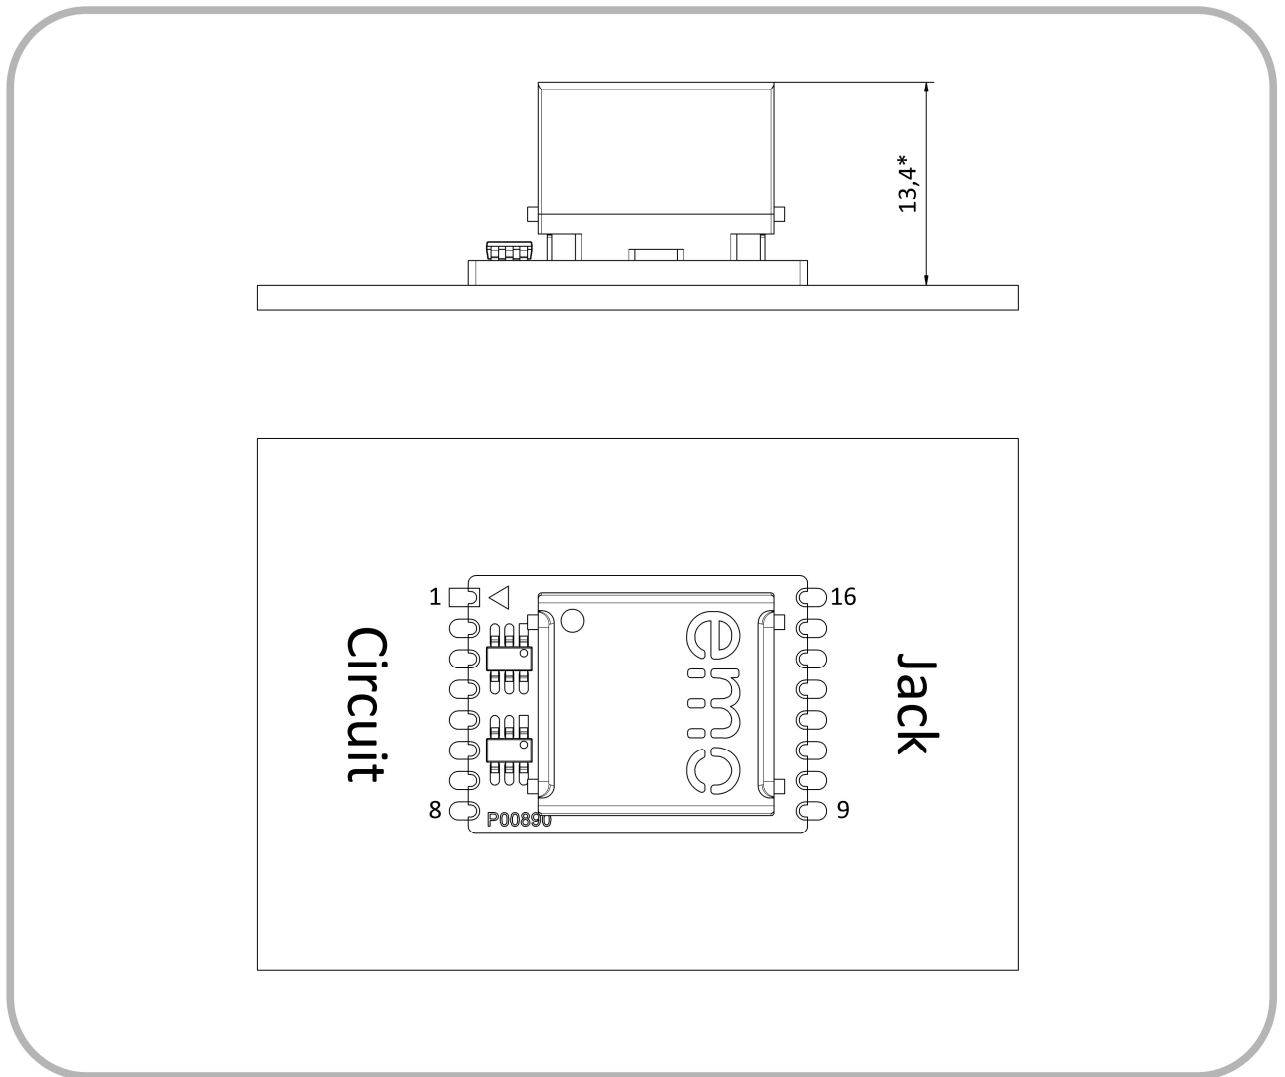


Figure 8. Physical dimensions of an EN-100S assembled onto a PCB.
The labels **Jack** and **Circuit** indicate the intended locations of the RJ45 Ethernet Jack and the product circuitry, respectively.

The EN-100S solder receptacles are suitable for population onto PCBs with surface-mount style pads, but must however be manually soldered. Refer to section **6 HANDLING AND ASSEMBLY NOTES**.

* The resulting component height of 13.4 mm is an expected dimension, and serves only as an indication.

5.4 EN-100C

5.4.1 EN-100C MODULE DIMENSIONS

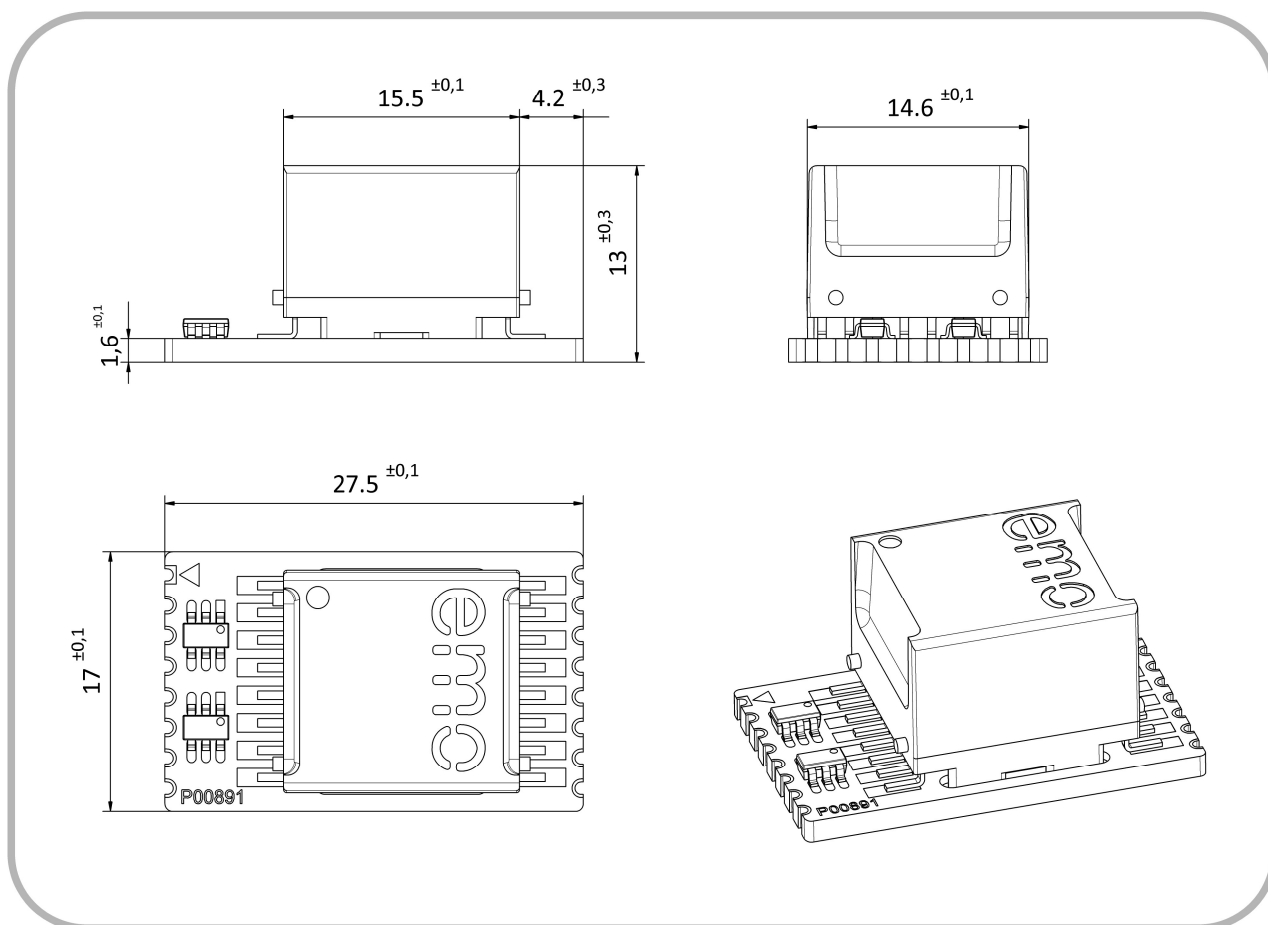


Figure 10. Physical dimensions of the EN-100C module.

5.4.2 EN-100C ASSEMBLY DIMENSIONS

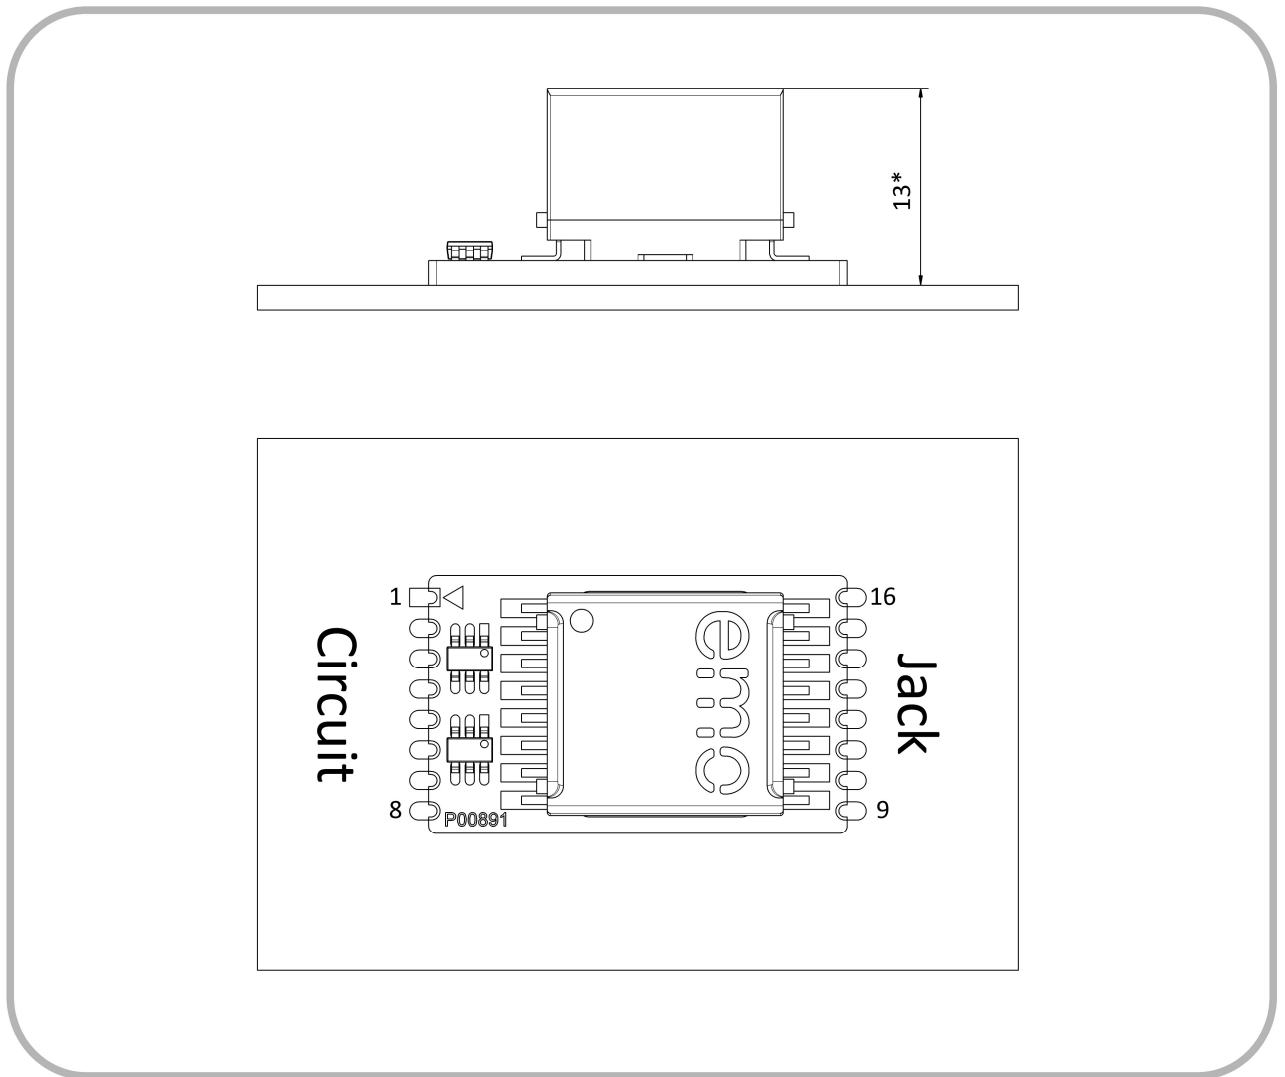


Figure 11. Physical dimensions of an EN-100C assembled onto a PCB.
The labels **Jack** and **Circuit** indicate the intended locations of the RJ45 Ethernet Jack and the product circuitry, respectively.

The EN-100C solder receptacles are suitable for population onto PCBs with surface-mount style pads, but must however be manually soldered. Refer to section **6 HANDLING AND ASSEMBLY NOTES**.

* The resulting component height of 13 mm is an expected dimension, and serves only as an indication.

5.4.3 EN-100C PCB LAYOUT

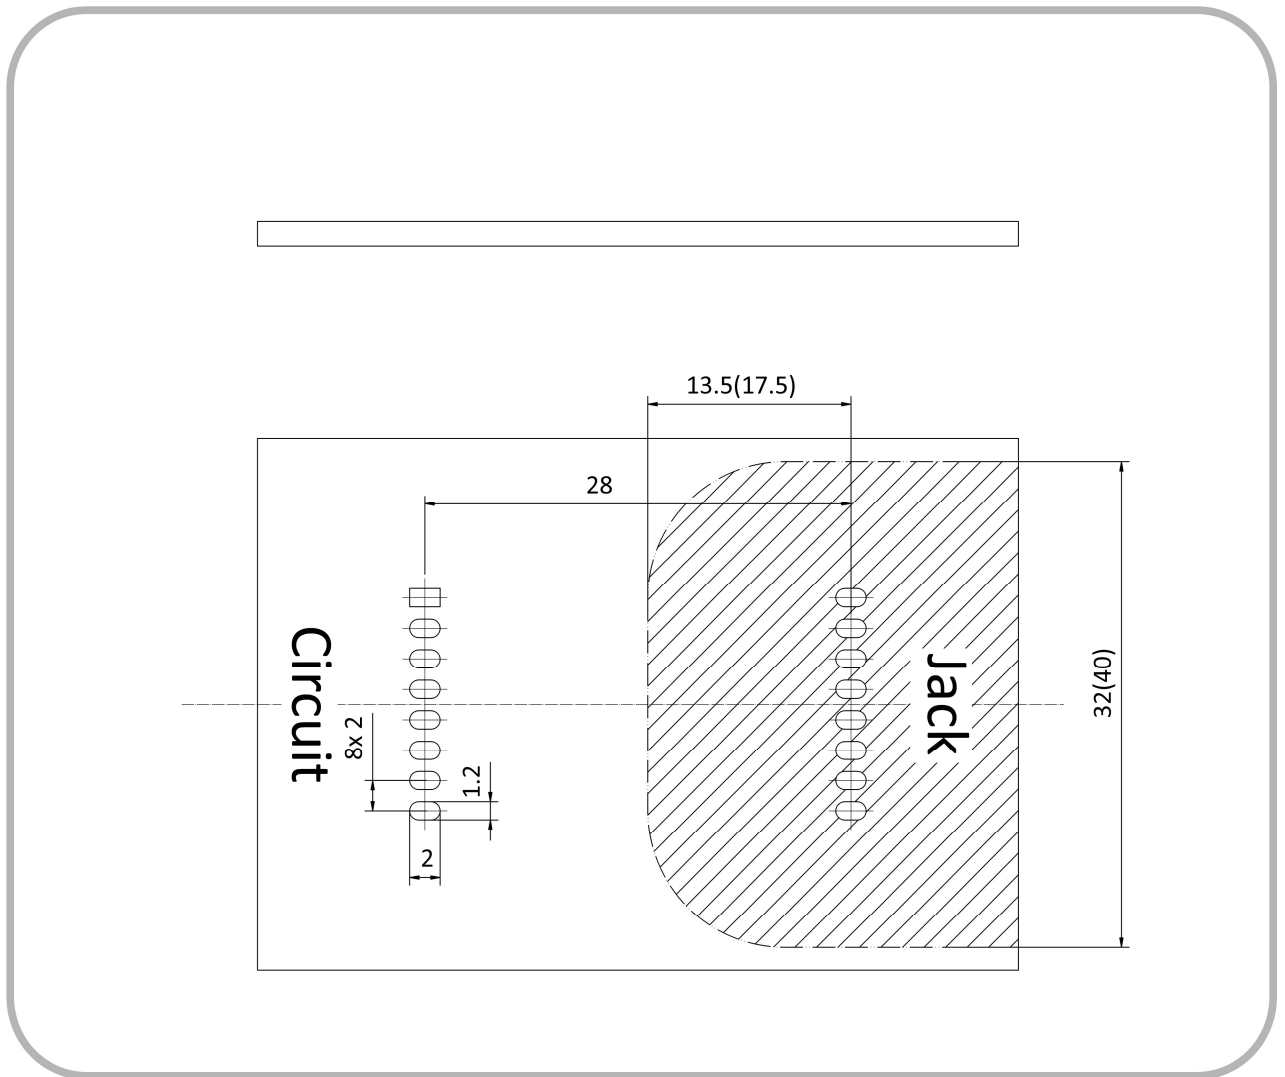


Figure 12. Suggested PCB layout for the EN-100C.

Dimensions in parentheses indicate the clearances required for environments with voltages up to 400 V AC.

PCB traces and other conducting surfaces must not be present in the hatched area, except for those connecting the EN-100C to the Ethernet Jack. This is required in order to maintain the creepage and clearance distances.

The dimensions of the hatched area are based upon requirements for realising two means of patient protection (MOPP) for medical electrical (ME) devices. For such ME applications, those with operating voltages of up to 250 V AC require the dimensions indicated in Figure 12 to be met or exceeded, and those with operating voltages of up to 400 V AC require the dimensions indicated in parentheses in Figure 12 to be met or exceeded.

However, the actual requirements for the clearance and creepage distances vary with device and application, and must be determined and verified. The assembly of the Network Isolator in a manner that satisfies requirements and relevant standards is the responsibility of the device manufacturer.

6 HANDLING AND ASSEMBLY NOTES

EN-100 Network Isolators are intended for manual soldering only. Assembly procedures using reflow ovens or wave soldering baths are not permissible as they may cause thermal damage to the potting material inside the transformer. Avoid exposing the transformer to ambient temperatures greater than 85°C.

7 APPLICATION INFORMATION

The EN-100 Network Isolators are designed for data transmission in the frequency range of 300 kHz to 100 MHz. Lower frequencies are strongly attenuated. For this reason, it is generally not possible to transmit the signals from nurse call systems, telephone systems or analogue audio / video signals over a Network Isolator.

The EN-100 Network Isolator can be used in a Power over Ethernet (PoE) network without restriction (however PoE devices downstream of the electrical isolation are not supplied with power).

8 SAFETY NOTICE

8.1 SAFETY INSPECTIONS

For the device or application fitted with EN-100, the test interval, as well as the requirements to be met for both regular safety inspections and post-repair inspections will be specified by the responsible organisation (e.g., manufacturer or operator as defined by the regulations), and based upon the applicable standards for the entire system.

8.2 CREEPAGE AND CLEARANCE DISTANCES

PCB layouts and applications that utilise EN-100 Network Isolators must be designed to meet or exceed the requirements of all applicable standards (for example, IEC 60601-1). Special attention must be paid to the required creepage and clearance distances.

9 SPECIFICATIONS

9.1 GENERAL

Category	Standards or Test Criteria	Properties
Designation		EMOSAFE EN-100
Construction		PCB Assembly
Mounting Arrangement		EN-100T, EN-100L: Soldering, plugging EN-100C, EN-100S: Soldering
Input Interface		EN-100T, EN-100L: 2 mm pin header EN-100C, EN-100S: Solder pad
Output Interface		EN-100T, EN-100L: 2 mm pin header EN-100C, EN-100S: Solder pad
Weight		approximately 6 g
Mean Time To Failure (MTTF)	SN 29500 Standard Temperature: 25°C Duty cycle: 100% (24 hours, 7 days)	3,250 years
	SN 29500 Standard Temperature: 40°C Duty cycle: 100% (24 hours, 7 days)	3,080 years

9.2 ETHERNET PERFORMANCE

Category	Standards or Test Criteria	EN-100
Transmission Speeds and Supported Network Protocols	10 Mbit/s, 10Base-T (IEEE802.3 Cl.14)	✓
	100 Mbit/s, 100Base-Tx (IEEE802.3 Cl.25)	✓
	1000 Mbit/s, 1000Base-T (IEEE802.3 Cl.40)	✓
Performance Category	ISO 11801, Permanent Link (PL)	Class D
Insertion Loss (absolute)	Typical:	0.8 dB @ 100 MHz
	Maximum:	1.0 dB @ 100 MHz
Return Loss (absolute)	Typical:	17.0 dB @ 100 MHz
	Minimum:	14.0 dB @ 100 MHz

9.3 ELECTRICAL

Category	Standards or Test Criteria		EN-100
AC Dielectric Strength	at 50 Hz, for 60 seconds		4.6 kV
DC Dielectric Strength	for 60 seconds		8.5 kV
Reinforced Isolation	IEC 60601-1		✓
Coupling Capacitance per Channel			37.5 pF ±25%
Total Coupling Capacitance			150 pF ±25%
Total Leakage Current	275 V AC at 50 Hz	Typical:	12.0 µA
		Maximum:	16.0 µA
TVS diode circuitry	Suppression of transients on the signal lines		✓

9.4 OPERATING CONDITIONS AND AREA OF APPLICATION

Category	Standards or Test Criteria		EN-100
Pollution Degree	IEC 61010		2 *
Overvoltage Category	IEC 60664-1		III
Maximum Working Voltage †	Maximum mains voltage of the connected devices, in accordance with IEC 60601-1		400 V AC 450 V DC
Temperature		Minimum:	-10°C
		Maximum:	+70°C
Air Humidity	Non-condensing	Minimum:	10%
		Maximum:	90%
Air Pressure		Minimum:	700 hPa
		Maximum:	1,060 hPa
Altitude		Maximum:	3,200 m

9.5 ENVIRONMENTAL CONDITIONS: STORAGE AND TRANSPORTATION

Category	Standards or Test Criteria		EN-100
Temperature		Minimum:	-40°C
		Maximum:	+70°C
Air Humidity	Non-condensing	Minimum:	10%
		Maximum:	90%
Air Pressure		Minimum:	500 hPa
		Maximum:	1,060 hPa

9.6 CERTIFICATES

Category	EN-100
UL Recognized Component	✓
UL File No.	E362969
IEC 60601-1	✓
IEC 60601-1-2	✓
ANSI/AAMI ES 60601-1	✓
CAN/CSA-C22.2 No. 60601-1	✓
Low Voltage Directive	✓
EMC Directive	✓
RoHS Directive	✓
Lead-free	✓

The versions of the cited standards and directives to which our products comply with can be found in our Declaration of Conformity and our UL certificate on our website under "[Standard Conformity and Certificates](#)".

* *Normally only nonconductive pollution occurs. Temporary conductivity caused by condensation is to be expected.*

† *The Network Isolator can be permanently exposed to this voltage level.*

9.7 ISOLATION DIAGRAM

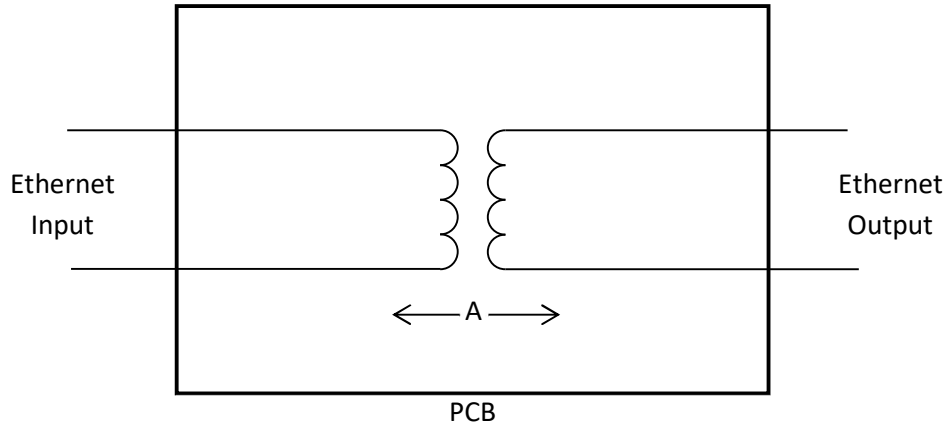


Figure 13. Isolation diagram of an EN-100 Network Isolator. Applies to all variants.

Area	Number and type of Means of Protection	Material Group (from CTI)	Maximum Operating Voltage		Required creepage distance (mm)	Required clearance distance (mm)	Measured creepage distance (mm)	Measured clearance distance (mm)
			V AC	V _{peak}				
A	2 MOPP *	IIIb †	400	565	12.0	7.0	12.5	12.5

9.8 FREQUENCY RESPONSE

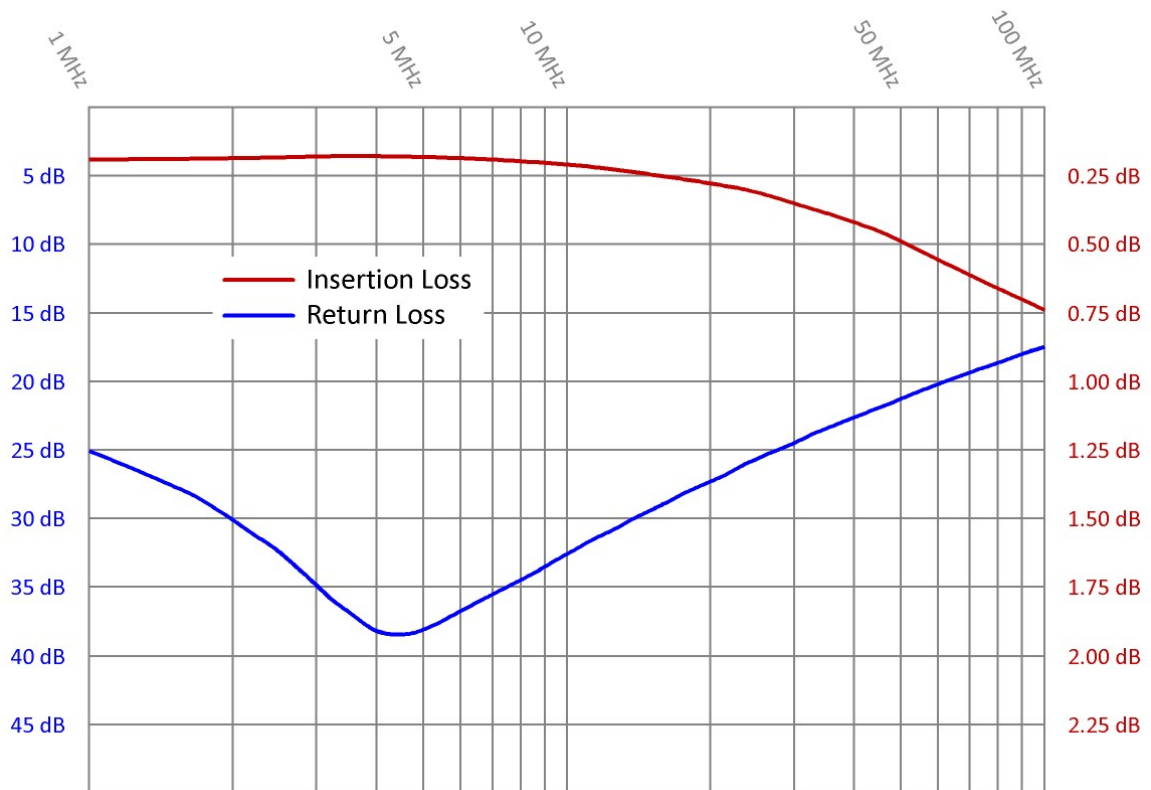


Figure 14. Typical frequency response for Insertion Loss and Return Loss of an EMOSAFE EN-100C Network Isolator.

* MOPP = Means of Patient Protection

† Materials in the Material Group IIIb have a Comparative Tracking Index (CTI) value between 100 and 175.

10 CIRCUIT DIAGRAM

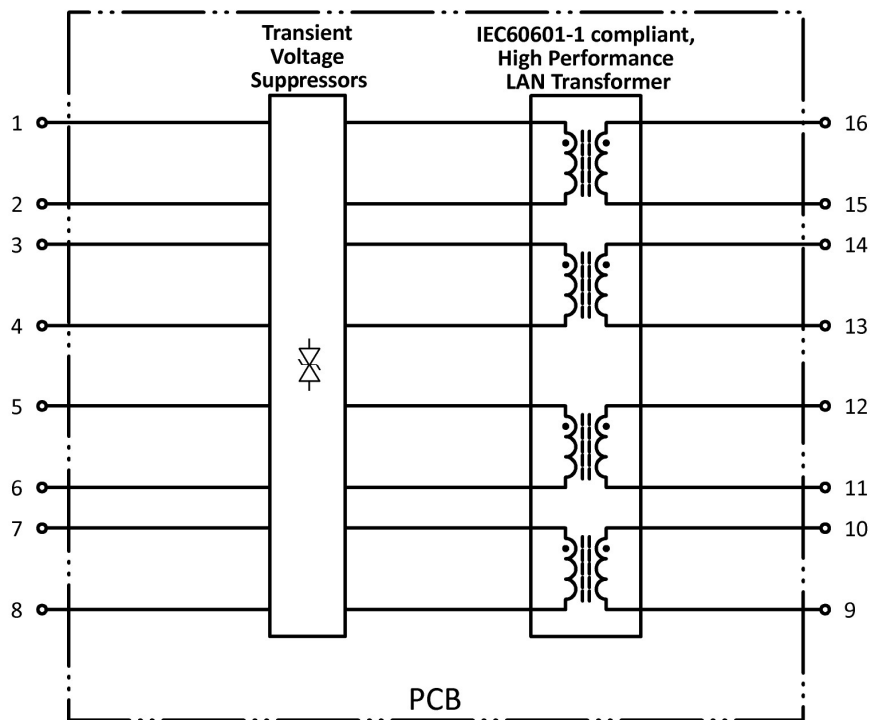







Figure 15. Circuit diagram for all EN-100 variants.

11 MAINTENANCE

EMOSAFE network isolators are maintenance-free when used as intended.

12 PRODUCT MARKINGS

	<p>This mark certifies conformity of the product with all applicable EU Directives.</p>
	<p>Marks the product as a UL "Recognized Component"; File No E362969.</p>
	<p>The product may not be disposed of in domestic waste.</p>
	<p>This product contains no substances containing lead and is manufactured using lead-free solder.</p>
	<p>This product meets the requirements of EU Directive concerning the limitation of the use of certain hazardous substances in electrical and electronic equipment.</p>

13 ACCESSORIES

There are no accessories available for EMOSAFE EN-100 network isolators.

14 QUALITY

EMO Systems GmbH maintains a certified quality management system for development and production in accordance with ISO 9001 and ISO 13485. Every network isolator is subjected to extensive quality control before delivery. Among other things, it is checked whether the achieved values for leakage current, dielectric strength, insertion loss, return loss and near crosstalk (NEXT) correspond to the specifications.

You will also find a declaration of conformity on our website confirming that the EMOSAFE network isolators comply with the requirements of the Low Voltage Directive (2014/35/EU), the Electromagnetic Compatibility Directive (2014/30/EU) and the Restriction of Use Directive hazardous substances in electrical and electronic equipment (2011/65/EU, RoHS).

15 PACKAGING

The packaging label provides the following information:

- Article description
- Quantity
- Date of manufacture
- Ordering code (OC)
- Serial number as 1D- (Code 128) and a 2D barcode (Data Matrix)

Contents:

- A network isolator of type EN-100C, EN-100L, EN-100S, EN-100T
- This data sheet

16 ENVIRONMENTAL PROTECTION INFORMATION

This device contains electronic components.

It must be returned to the manufacturer for disposal after use.

17 CONTACT AND SUPPORT

You can find the current contact details on our website: <https://emosystems.de/en/contact/>

Or you can reach us by email at the following address: support@emosystems.de

18 LEGAL NOTICE

The information in this data sheet has been compiled to the best of our knowledge and with all care. However, we cannot guarantee that they are complete and error-free.

The user is responsible and liable for the correct use of this product. Neither EMO Systems GmbH nor EMO Systems Inc. assume liability.

This data sheet is subject to change without prior notice.

